IMPORTANT

Thank you for purchasing Rigid Industries' products for your vehicle. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with installation.

Always disconnect battery before servicing any fuses or electrical system.

Your installation is now complete.

Welcome to the Rigid Nation!

FOLLOW US ON FACEBOOK AT
facebook.com/RigidIndustries

779 N Colorado St, Gilbert, AZ 85233 • (855) 760 5337 • www.RigidIndustries.com

12/2013 - Part #IS-46506

RIGID INDUSTRIES LED LIGHTING

BUMPER MOUNT KIT

Rigid Industries 2011-2013 GMC 2500/3500 Bumper Mount Kit
Mounts one 20" E-Series, E2-Series or
two SR-Series or SR2-Series Light

PARTS INCLUDED

Driver Side Mounting Bracket (1)
Passenger Side Mounting Bracket (1)
Mount Bolt (4)
Mount Washer (4)
Mount Nut (4)

IMPORTANT

Thank you for purchasing Rigid Industries' products for your vehicle. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with installation.

Always disconnect battery before servicing any fuses or electrical system.

Your installation is now complete.

Welcome to the Rigid Nation!

FOLLOW US ON FACEBOOK AT
facebook.com/RigidIndustries

779 N Colorado St, Gilbert, AZ 85233 • (855) 760 5337 • www.RigidIndustries.com

12/2013 - Part #IS-46506

RIGID INDUSTRIES LED LIGHTING

BUMPER MOUNT KIT

Rigid Industries 2011-2013 GMC 2500/3500 Bumper Mount Kit
Mounts one 20" E-Series, E2-Series or
two SR-Series or SR2-Series Light

PARTS INCLUDED

Driver Side Mounting Bracket (1)
Passenger Side Mounting Bracket (1)
Mount Bolt (4)
Mount Washer (4)
Mount Nut (4)

INSTRUCTIONS

Figure 1

1. Mount brackets in opening in front bumper using provided nuts, bolts and washers, as shown in Figure #1 below. Keep all bolts loose at this time so that you can bend the brackets outward and insert your light.

2. Once both brackets are loosely installed, insert your light(s). If you are mounting one 20" E-Series or E2-Series light, use the center hole location on both brackets. If you are mounting two 20" SR-Series or SR2-Series lights, use the two outer hole locations on both brackets. Loosely tighten nuts on both end cap studs as shown in Figure #2. Do not fully tighten at this time.

3. Access the two brackets from above as shown in Figure #3 to fully tighten all four mount bolts.

4. Adjust the light(s) and fully tighten the nuts on the end cap studs.

5. Wire your light(s) using the wire harness and switch provided. Take care to avoid any sharp or abrasive surfaces when routing the wire.

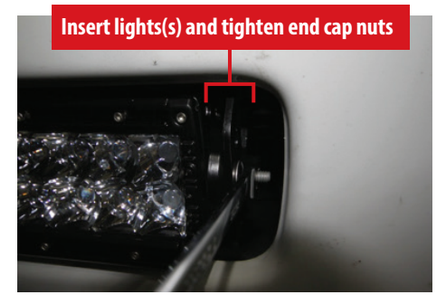

Figure 2

Figure 2

INSTRUCTIONS

Figure 1

1. Mount brackets in opening in front bumper using provided nuts, bolts and washers, as shown in Figure #1 below. Keep all bolts loose at this time so that you can bend the brackets outward and insert your light.

2. Once both brackets are loosely installed, insert your light(s). If you are mounting one 20" E-Series or E2-Series light, use the center hole location on both brackets. If you are mounting two 20" SR-Series or SR2-Series lights, use the two outer hole locations on both brackets. Loosely tighten nuts on both end cap studs as shown in Figure #2. Do not fully tighten at this time.

3. Access the two brackets from above as shown in Figure #3 to fully tighten all four mount bolts.

4. Adjust the light(s) and fully tighten the nuts on the end cap studs.

5. Wire your light(s) using the wire harness and switch provided. Take care to avoid any sharp or abrasive surfaces when routing the wire.

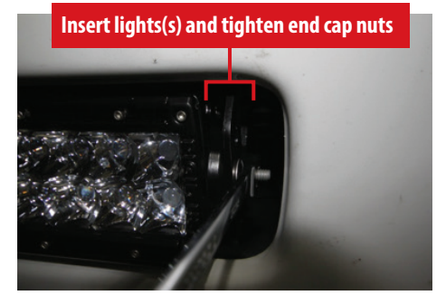

Figure 2

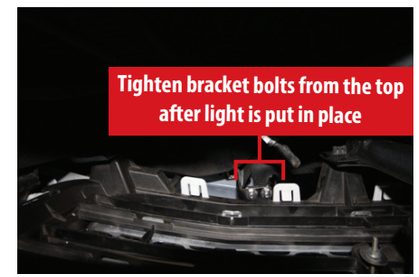

Figure 2