

TOYOTA 2007-21 Tundra Front Sway Links

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

▲ NOTICE

NOTE: If the vehicle is equipped with sway drop brackets they will need to be removed before installing the new links.

KIT CONTENTS: Sway Links x2 TOOLS NEEDED: 19mm Wrench or Socket HARDWARE INCLUDED: Nuts x2




Torque Specs:

| Size | Grade 5 | Grade 8 | Size | Class 8.8 | Class 10.9 |
|-------|-----------|-----------|------|-----------|------------|
| 5/16" | 15 ft/lbs | 20ft/lbs | 6MM | 5ft/lbs | 9ft/lbs |
| 3/8" | 30 ft/lbs | 35ft/lbs | 8MM | 18ft/lbs | 23ft/lbs |
| 7/16" | 45 ft/lbs | 60ft/lbs | 10MM | 32ft/lbs | 45ft/lbs |
| 1/2" | 65 ft/lbs | 90ft/lbs | 12MM | 55ft/lbs | 75ft/lbs |
| 9/16" | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs | 120ft/lbs |
| 5/8" | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs |
| 3/4" | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs |




INSTALLATION INSTRUCTONS


- 1. Remove the lower sway link bolt from the lower control arm using a 19mm socket. See Photo 1.
- 2. **If the vehicle is equipped** with sway bar drop brackets they will need to be removed and placed back into the OE location before installing the new links. **See Photo 2.**

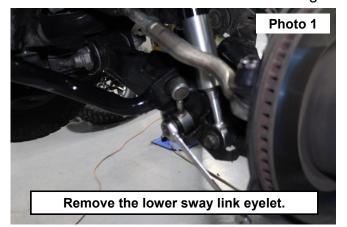




- 3. Sway bar shown in the OE location. See Photo 3.
- 4. Remove the nut from the upper sway link using a 19mm socket. Then remove the sway link. **See Photo 4.**

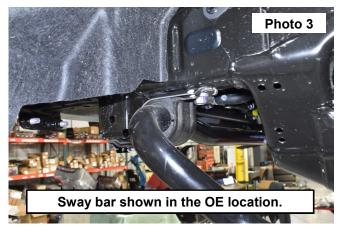

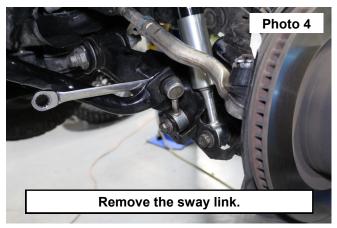

- 5. Install the sway link into the sway bar and secure using the supplied nut. Tighten using a 19mm socket. **See Photo 5.**
- 6. Install the sway link eyelet into the lower control arm and secure using the OE bolt. Tighten using a 19mm socket. **See Photo 6.**



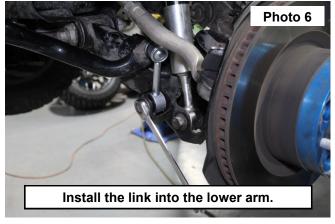

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.