

TOYOTA LAND CRUISER 76 STATION WAGON REAR LADDER



(15 mins) INSTALL TIME: 15 mins



IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.



GET ORGANIZED

Here is what you are looking at:

Item #	Quantity	Description
1	1	LADDER
2	3	M6 x 19 FLAT WASHER
3	3	M6 NYLOC NUT



- 10 mm Flat or Socket Wrench
- □ Phillips / Star Screwdriver






(A)

Familiarize yourself with the parts and then step away from the work area and read through these instructions from beginning to end. Take a moment as a little prep now may save you a lot of time later.

2 FIT THE LADDER

(A) Open the vehicle's left hand side rear door. Loosen and remove the screw as indicated securing the door latch to the inside of the vehicle.

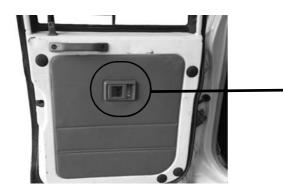




(**B**) Pull the latch from the door card. Once the latch if free, the door card can be loosened and removed by gently pulling on it and feeding the latch back through the cut-out inside.





Peel back the plastic cover and loosen the three nuts securing the rear number plate light to the vehicle.

Disconnect the electrical fitting and remove the light from the vehicle.

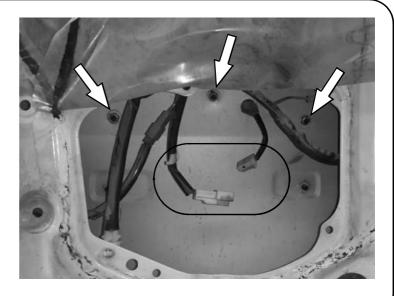

2 FIT LADDER CONT...

(**D**) Hook the top of the Ladder over the top of the left hand door. Note the lip on the Ladder must go between the vehicles body and the rubber door seal as shown.



(**E**) Line up the mounting holes in the bottom of the Ladder with the light's mounting holes in the vehicle's door.



(**F**) Fit the light removed in Step 2C back into position. The bottom of the Ladder will now be sitting between the light and the vehicle's door and is secured in position by the light. You may require a friend to apply weight to the Ladder in order to line the mounting holes up and refit the light.

Secure the light and Ladder in position using the three M6 x19 Flat Washers and three M6 Nyloc Nuts (Items 2 & 3) supplied.



FIT LADDER CONT...

- (${\bf G}$) Reconnect the electrical fitting from Step 2C, refit the plastic sheet, door panel and latch.
- ($oldsymbol{\mathsf{H}}$) Congratulations, you have completed your installation. take a Step back and admire your work. Good Job!



- 3 INSTALL OTHER VEHICLE AND RACK ACCESSORIES
 - ($oldsymbol{A}$) Now's the time to visit your favorite Front Runner dealer in person or online.